



* All instructions are for players playing on the right side or 1P position.



Punch

Long Press: Strong
Short Press: Light



Kick

Long Press: Strong
Short Press: Light



**Challenge
Button**

Lever Down + C Button
Play Dead Ploy



Not Used

Throw ... Approach opponent, move Lever Right or Left, and press A Button.

Dash ... Press the Lever forward quickly twice.

Back Dash ... Press the Lever backward quickly twice.

Deflect the missiles of death ... Guard yourself from the flying energy balls, ice breadth, and missiles of your opponents.

Play Dead Ploy ... Lever Down + C Button.

WORLD H

* All instructions are for players playing on the right side or 1P position.



BROCKEN



J. CARN



KIM DRAGON



RYOKO



J. MAXIMUM



ERIK



JACK

ROCKET PUNCH ↓ ↘ + A	MONGOLIAN TIGER FLASH ← THEN → + A	DRAGON KICK ↓ ↘ + B	SUPER SHOULDER THROW NEAR OPPONENT ← ● ● ● ● → + A	SHOULDER BUTT CRASH ↓ ↘ + B	THOR'S HAMMER ↓ ↘ + A	IRON CRAWL ↓ ↘ + B
HURRICANE ARM ↓ ↘ + A	MONGOLIAN DYNAMITE ↓ THEN ↘ + A	THE HUNDRED BROWS A REPEATEDLY	BOSATSUSHO ↓ ↘ + A	HEAD CRASH ↓ ↘ + A	YGIR'S HALBERD ↓ ↘ + B	JAWS OF DEATH → ↓ ↘ + B
SPARK THUNDER A REPEATEDLY	MONGOLIAN PRESS ↓ ↘ + B	LEAPING FOOT SLICE ↓ ↘ + B	PALMS OF DESTRUCTION ↘ + A	LIGHTNING TACKLE → ↓ ↘ + A	BLIZZARD BREATH ← ↘ ↘ ↘ + A	KNEE SMASHER ↓ ↘ + B
LONG SPARK THUNDER ← ↘ ↘ ↘ + A	HEAD SLIDING ↘ + B	FLYING DRAGON KICK ↓ ↘ + B	FLYING SWALLOW CHOP TRIANGLE JUMP + A	SLIDING KICK ↘ + B	LONG HORN ← THEN → + A	MIXER CRUSH ↓ ↘ + A

HEROES 2 JET

Other Pugilist Pops are Here for the Finding !!

SUPER HIGH TECH GAME
NEO-GEO



HANZOU



FUUMA



RYOFU



SHURA



MUDMAN



CAPTAIN KIDD



RASPUTIN



JANNE



MUSCLE POWER

	REKKO ZAN	REPPU ZAN	SPEAR HEAD BOOGIE	TIGER FANG	MUDMAN ATTACK	SHARK KNUCKLE	FIRE BALL	AURA BIRD	MUSCLE BOMBER
	↓ ↘ ↗ + A	↓ ↘ ↗ + A	↓ ↘ ↗ + A	↖ THEN ↗ + A	↓ ↘ ↗ + A	↖ THEN ↗ + A	↓ ↘ ↗ + A	↖ THEN ↗ + A	↖ THEN ↗ + B
TH	KOH RYU HA	EN RYU HA	PSYCHIC KICK	TIGER CLAW	MUD GYRO	SPIRAL KICK	THUNDER BALL	FLASH SWORD	TORNADO BREAKER
	↗ ↘ ↗ + A	↗ ↘ ↗ + A	↗ ↘ ↗ ↘ ↗ + B	↖ THEN ↗ + B	↓ THEN ↗ + A	↖ THEN ↗ + B	↖ ↘ ↗ ↘ ↗ + A	↓ THEN ↗ + B	NEAR OPPONENT ↗ + A
R	NINPO KOH RON KAZAN	NINPO FURIN KAZAN	FISTS OF FLAME	MUETAI KICK	MUD CUTTER	PIRATE SHIP BLAST	AXLE SPIN	JUSTICE SWORD	SUPER DROP KICK
	↖ ↘ ↗ ↘ + B	↖ ↘ ↗ ↘ + B	↓ ↘ ↗ + A	↓ ↗ + B	↓ ↘ ↗ + A	↓ ↘ ↗ + A	↓ ↘ ↗ + B	↖ THEN ↗ + B	↓ ↘ ↗ ↘ + B
I	NINJA LEG LARIAT	MID-AIR EN RYU HA	SPEAR OF DESTRUCTION	DOUBLE KNEE KICK	MUD LAUNCHER	SHARK KICK	KOSSACK DANCE	SLIDING KICK	ANTI-AIRCRAFT GIANT SWING
	↓ ↘ ↗ + B	JUMP + ↗ ↘ ↗ + A	↓ ↘ ↗ + B	↓ ↘ ↗ + B	↓ ↘ ↗ + B	JUMP + ↗ + B	↓ ↘ ↗ + B	↗ + B	NEAR OPPONENT + A AND B TOGETHER

WORLD HEROES 2 JET INSTRUCTIONS FOR SOFT DIP

WORLD HEROES 2 JET

⇒ ROUND TIME	99
DEMO SOUND	WITH
DIFFICULTY	LEVEL 4
CREDIT DISP	WITH
CONTINUE	WITH
LEVEL DISP	WITH
HOW TO PLAY	WITH
LANGUAGE	ENGLISH

1/ ROUND TIME	Sets the count of each game round. (1~99)
ROUND TIME SELECTION.....	Select [ROUND TIME] by moving the joystick up or down to the desired setting. Fix the setting with the A Button, return to the [ROUND TIME] menu using the B Button.
STANDARD SETTING.....	99
2/ DEMO SOUND	Select WITH(SOUND) or (WITHOUT SOUND) for the DEMONSTRATION SCREEN.
DEMO SOUND SELECTION.....	Move the cursor to DEMO SOUND with the joystick. To fix the setting, press the A Button. To cancel and reselect, press the B Button.
STANDARD SETTING.....	WITH
3/ DIFFICULTY	Select Game Play Difficulty from 8 levels, number 1 being the easiest level, number 8 being the most difficult.
DIFFICULTY SELECTION.....	Move the cursor to DIFFICULTY. To fix the setting, press the A Button. To cancel a setting, press the B Button to revert to the main menu.
STANDARD SETTING.....	LEVEL 4
4/ CREDIT DISPLAY	Select the display or the cancelation of the CREDIT indication on the game screen.
CREDIT DISPLAY SELECTION....	Using the joystick, move the cursor to [CREDIT DISPLAY] . Fix the desired setting using the A Button, cancel a setting with the B Button and return to the menu.
STANDARD SETTING.....	WITH
5/ CONTINUE	Select the CONTINUE PLAY setting.
CONTINUE PLAY SELECTION....	Using the joystick, move the cursor to [CONTINUE] . Fix the desired setting by pressing the A Button, cancel by pressing the B Button and return to the main menu.
STANDARD SETTING.....	WITH
6/ LEVEL DISPLAY	Sets the display of LEVEL on the game screen. (This LEVEL represents the [GAME DIFFICULTY] level which is set in the DIFFICULTY SETTING).
LEVEL DISPLAY SETTING.....	Using the joystick, move the cursor to [LEVEL DISP] . Fix the desired setting by pressing the A Button, cancel by pressing the B Button and return to the main menu.
STANDARD SETTING.....	WITH
7/ HOW TO PLAY	Determines the display of game play instructions.
HOW TO PLAY SETTING.....	Using the joystick, move the cursor to [HOW TO PLAY] . Fix the desired setting by pressing the A Button, cancel by pressing the B Button and return to the main menu.
STANDARD SETTING.....	WITH
8/ LANGUAGE	Determines the language of all titles.
LANGUAGE SETTING.....	Using the joystick, move the cursor to [LANGUAGE] . Fix the desired setting by pressing the A Button, cancel by pressing the B Button and return to the main menu.
STANDARD SETTING.....	ENGLISH

WORLD HEROES 2 JET

SUPER HIGH TECH GAME
NEO-GEO

*All instructions are for players playing on the right side or 1P position.

Other Pugilist Pops are Here for the Finding !!



BROCKEN



J. CARN



KIM DRAGON



RYOKO



J. MAXIMUM



ERIK



JACK



HANZOU



FUUMA



RYOFU



SHURA



MUDMAN



CAPTAIN KIDD



RASPUTIN



JANNE



MUSCLE POWER

ROCKET PUNCH ↓ ↘ + A	MONGOLIAN TIGER FLASH ← THEN → + A	DRAGON KICK ↓ ↘ + B	SUPER SHOULDER THROW NEAR OPPONENT ↓ ↘ + A	SHOULDER BUTT CRASH ↓ ↘ + B	THOR'S HAMMER ↓ ↘ + A	IRON CRAWL ↓ ↘ + B	REKKO ZAN ↓ ↘ + A	REPPU ZAN ↓ ↘ + A	SPEAR HEAD BOOGIE ↓ ↘ + A	TIGER FANG ← THEN → + A	MUDMAN ATTACK ↓ ↘ + A	SHARK KNUCKLE ← THEN → + A	FIRE BALL ↓ ↘ + A	AURA BIRD ← THEN → + A	MUSCLE BOMBER ← THEN → + B
HURRICANE ARM ↓ ↘ + A	MONGOLIAN DYNAMITE ↓ THEN ↘ + A	THE HUNDRED BROWS A REPEATEDLY	BOSATSUSHO ↓ ↘ + A	HEAD CRASH ↓ ↘ + A	YGIR'S HALBERD ↓ ↘ + B	JAWS OF DEATH → ↓ ↘ + B	KOH RYU HA → ↓ ↘ + A	EN RYU HA → ↓ ↘ + A	PSYCHIC KICK → ↘ ↘ ↘ + B	TIGER CLAW ← THEN → + B	MUD GYRO ↓ THEN ↘ + A	SPIRAL KICK ← THEN → + B	THUNDER BALL ← ↘ ↘ ↘ + A	FLASH SWORD ↓ THEN ↘ + B	TORNADO BREAKER NEAR OPPONENT ↻ + A
SPARK THUNDER A REPEATEDLY	MONGOLIAN PRESS ↓ ↘ + B	LEAPING FOOT SLICE ↓ ↘ + B	PALMS OF DESTRUCTION ↘ + A	LIGHTNING TACKLE → ↓ ↘ + A	BLIZZARD BREATH ← ↘ ↘ ↘ + A	KNEE SMASHER ↓ ↘ + B	NINPO KOH RIN KAZAN ↘ ↘ ↘ + B	NINPO FURIN KAZAN ↘ ↘ ↘ + B	FISTS OF FLAME ↓ ↘ + A	MUETAI KICK ↓ ↘ + B	MUD CUTTER ↓ ↘ + A	PIRATE SHIP BLAST ↓ ↘ + A	AXLE SPIN ↓ ↘ + B	JUSTICE SWORD ← THEN → + B	SUPER DROP KICK ↓ ↘ + B
LONG SPARK THUNDER ← ↘ ↘ ↘ + A	HEAD SLIDING ↘ + B	FLYING DRAGON KICK ↓ ↘ + B	FLYING SWALLOW CHOP TRIANGLE JUMP + A	SLIDING KICK ↘ + B	LONG HORN ← THEN → + A	MIXER CRUSH ↓ ↘ + A	NINJA LEG LARIAT ↓ ↘ + B	MID-AIR EN RYU HA JUMP + → ↓ ↘ + A	SPEAR OF DESTRUCTION ↓ ↘ + B	DOUBLE KNEE KICK ↓ ↘ + B	MUD LAUNCHER ↓ ↘ + B	SHARK KICK JUMP + ↘ + B	KOSSACK DANCE ↓ ↘ + B	SLIDING KICK ↘ + B	ANTI-AIRCRAFT GIANT SWING NEAR OPPONENT + A AND B TOGETHER